

# Steeline Tapered Square Downpipes

100 x 50 & 100 x 75

ST24



**100 x 50**



**100 x 75**

## Colorbond® Zinalume®

Tapered Square Downpipes come in different size and lengths (1.8m and 2.4m) depending on the amount of rainwater to be discharged and the number of downpipes to be installed on the building. Each downpipe has a big and a small end of the ease of joining. Downpipes are made from COLORBOND® or ZINCALUME® Steel and are strong & long lasting.

**Ph. 1300 STEELINE**

**[steeline.com.au](http://steeline.com.au)**



**Service over and above**

# Steeline Tapered Square Downpipes

100 x 50 & 100 x 75


ST24

## Fixing Instructions


1. The downpipe big end is placed over the outlet in the gutter.
2. Multiple lengths if required are joined simply by sliding the small end into the large end until the downpipe is long enough to fit into the storm water drain outlet.
3. Clips or astricals are then placed over the downpipe and fixed to the wall or post at spacing of no greater than 2 metres apart.

## Making offsets


1. Measure the distance from the back of the gutter drop to the wall or post.

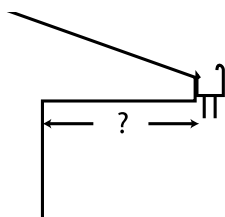


2. Lay downpipe with seam facing up and using the big end measure down approx 150mm and mark mitre cut. For 100x75 cut out 70 + 65. For 100x50 cut out 45 + 40.

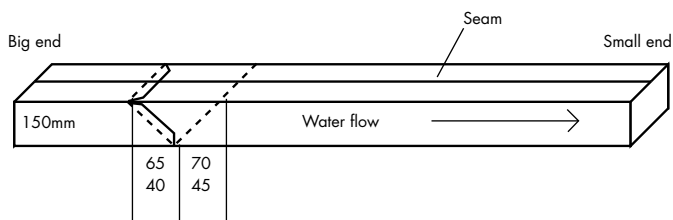

3. Leave 100mm tabs on flow side. Fold up to form angle, rivet and seal.
4. Lay straight edge as shown and mark the measurement from step 1 at right angle to the straight edge.

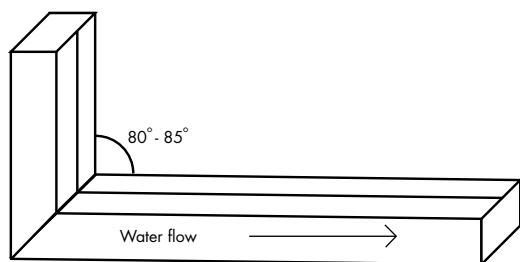

5. Mark and cut downpipe as shown in step 4.
6. Leave 10mm tabs on flow side and fold to form second angle, rivet and seal.

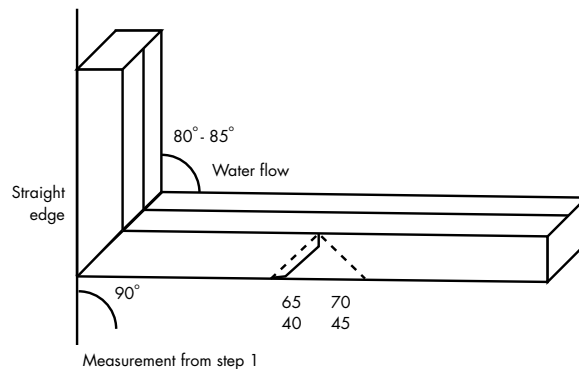

7. To extend downpipe to drainage level simply add extra lengths using the big and small end system.

